





Remote controller Instruction

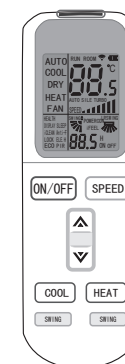

- ◆ Read this “instructions” carefully so that you can use the air conditioner safety and correctly.
- ◆ Please take good care of the “instructions” so that it can be referred to at any time.

Remote controller

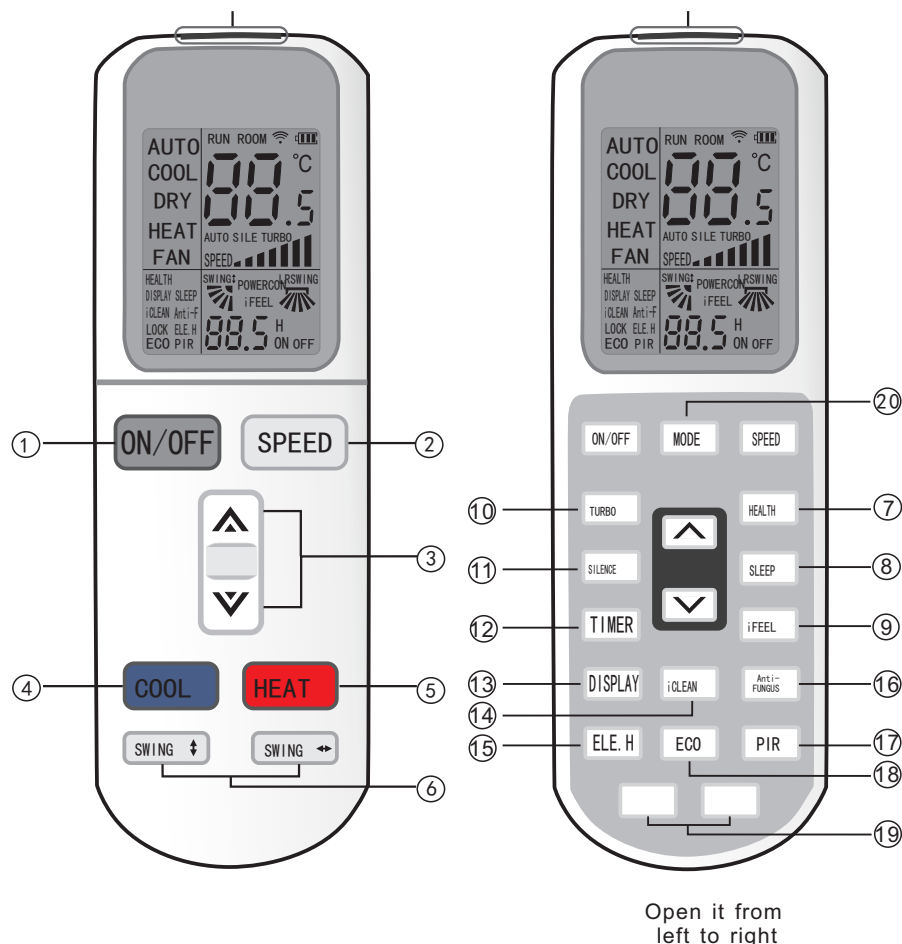

- Note: 1. Remote controller outside buttons only valid when surface cover is closed.
 2. Two white button is only for addressing set. If it has been set, remember not to reset by yourself.

Note: The cooling-only unit doesn't have heat mode.

⑪【SLEEP】 button

Press SLEEP button, then display screen shows "SLEEP", the sleeping function of the air conditioner is activated.

⑫【SWING】 button

Press this button, the horizontal wind direction vanes can swing automatically, when you have the desired vertical wind direction, press it again, the horizontal wind direction vanes will be stopped at the situation of your choice.

⑬【HEALTH】 button

Press this button, you can turn on or off the health function.

⑭【FUNGUSPROOF】 button

This A/C has special dry and anti-mold function which has "yes" or "no" two selections. This function is controlled by the remote controller under cooling, dry and auto (cooling and dry) modes, the horizontal wind guiding bars are at the initial position for cooling. The A/C runs under heating mode (the cooling only A/C only runs under fan mode), the internal fan runs for three minutes with weak wind before stop. The purpose of this function is to dry the inside of the evaporator and to prevent the evaporator from going mouldy due to water deposition and thus dispersing strange smell.

Note:

1. This function has not been set in the factory. You may freely set and cancel this function. The setting method is: under "off" status of the A/C and the remote controller, point the remote controller toward the A/C and continuously press "FUNGUSPROOF" pushbutton for one time, the buzzer keep beeping five times again after five times beep, indicating that this function is ready. In case this function has been set, unless the whole A/C is powered off or the function is manually cancelled, the A/C then has this function as default;
2. To cancel the function: 1. Power off the whole A/C; 2. Under "off" status of the A/C and the remote controller, point the remote controller toward the A/C and continuously press "FUNGUSPROOF" pushbutton for one time, the buzzer keep beeping three times again after five times beep, indicating that this function has been cancelled;
3. When this function is on, it is suggested not to restart the A/C before it is completely stop;
4. This function will not run in case of time stop or sleep stop.

★2.3.2 Usage

Automatic operation mode

- 1.Press the ON/OFF button, the air-conditioner starts to operate.
- 2.Press the MODE button, select the automatic operation mode.
- 3.Press the SPEED button, you can select fan speed.You can select fan speed from LOW, MID, HIGH, AUTO.
- 4.Press ON/OFF button again, the air-conditioner stops.

●Cooling/Heating operation mode(cold wind type has no heating function)

- 1.Press the ON/OFF button, the air-conditioner starts to operate.
- 2.Press the MODE button, select the Cooling or Heating operation mode.
- 3.Press the “ Δ ” or “ ∇ ” button, set the temperature, temperature can be set at 1℃ difference range from 16-32℃.
- 4.Press the SPEED button, you can select fan speed. You can select fan speed from LOW, MID, HIGH, AUTO.
- 5.Press ON/OFF button again, the air-conditioner stops.

●Fan operation mode

- 1.Press the ON/OFF button, the air-conditioner starts to operate.
- 2.Press the MODE button, select the Cooling or Heating operation mode.
- 3.Press the SPEED button, you can select fan speed.You can select fan speed from LOW, MID, HIGH.
- 4.Press ON/OFF button again, the air-conditioner stops.

Remark: In the circulation operation mode,setting the temperature is noneffective.

●Drying operation mode

- 1.Press the ON/OFF button, the air-conditioner starts to operate.
- 2.Press the MODE button, select the Dry operation mode.
- 3.Press the “ Δ ” or “ ∇ ” button, set the temperature, temperature can be set at 1℃ difference range from 16-32℃.
- 4.Press the SPEED button, you can select fan speed.You can select fan speed from LOW, MID, HIGH, AUTO.
- 5.Press ON/OFF button again, the air-conditioner stops.

Note:

This manual introduces function for all of the remote controller, maybe you press one button without any reaction, well, the air-conditioner you bought has no this function.

●Timer button mode

1) Clock Function

Clock setting during using period,the method just like below :

- 1.Open the lid of the remote controller,then press **Timer/Clock** button,the Clock function is activated.
- 2.Press the “ Δ ” or “ ∇ ” button to set the clock time, The time is 12-hour system with a.m.& p.m.
- 3.Press the TIMER button again to confirm the clock time.

2) Timing ON Function

Timing ON function must be set when the air conditioner is off.

The method just like below:

- 1.Press TIMER button, the letter “ON” will be displayed and flicker.
- 2.Press the “ Δ ” or “ ∇ ” button to set the time, the time is 12-hour system with a.m.& p.m.
- 3.Press the TIMER button again to confirm the clock time.
- 4.Press other button to select the operation condition.(including mode ,temperature, swing,fan speed,etc.).

Note:When the Clock or Timing on setting is the same as the setting time, the air conditioner will automatically close or operate .

●Sleep operation mode

- 1.Press ON/OFF button, the air conditioner starts to operate.
- 2.Press the MODE button to select cooling or heating status.
- 3.Open the lid of the wired controller, press the SLEEP button,the display will shows ,the sleeping function will be activated.
- 4.Press SLEEP button again ,the sleeping function will be cancelled. Then the air conditioner will keep its setting to operate.
- 5.Press ON/OFF button ,the air conditioner stops.

When the sleep function starts,it will operate like follows:

1.Cooling mode:



2.Heating mode:



3.The sleep mode will last for 7 hours ,and then stop automatically.